


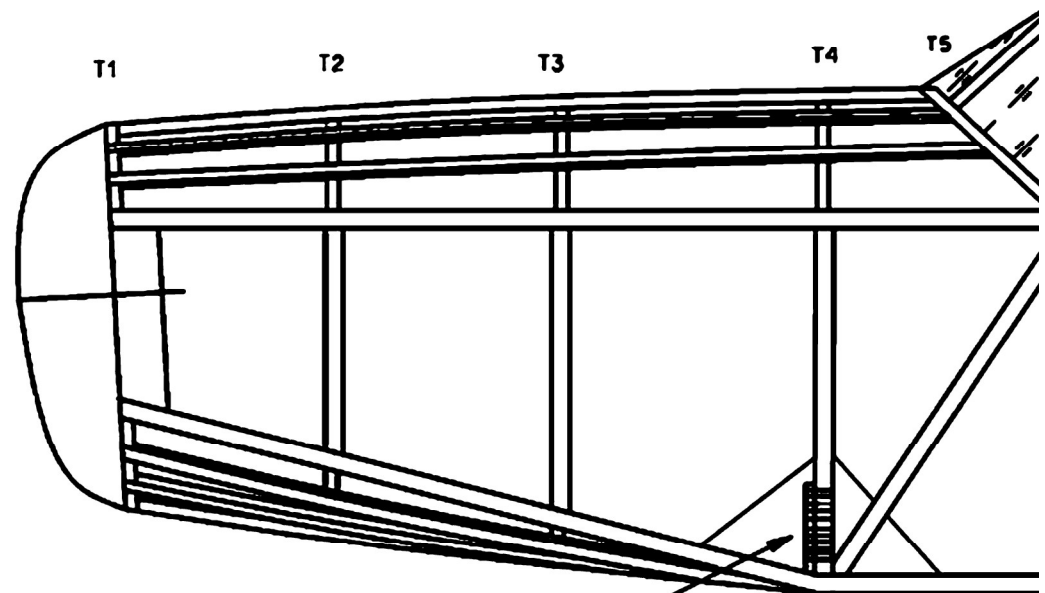




Stringers sit on top of these formers

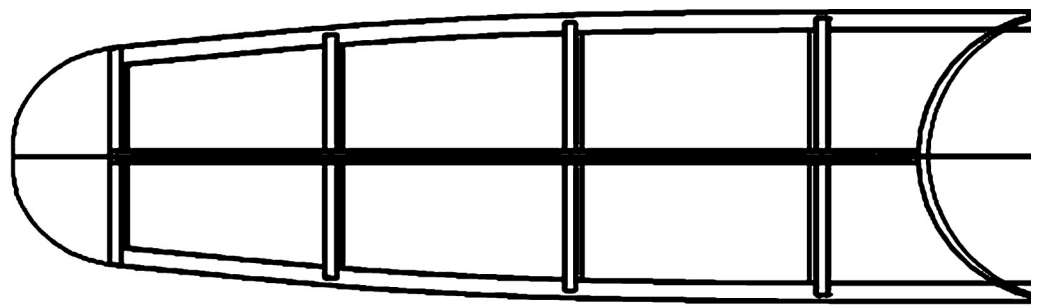


Wrap landing gear wire thread and glue well. T1 angle braces!

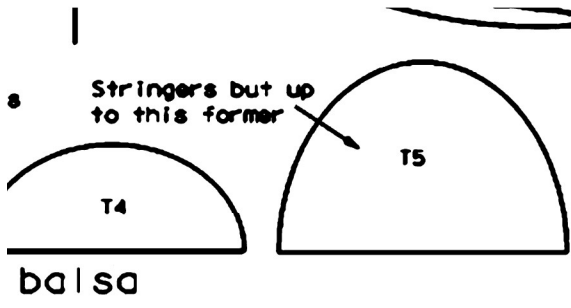

Outlines 1/16" balsa

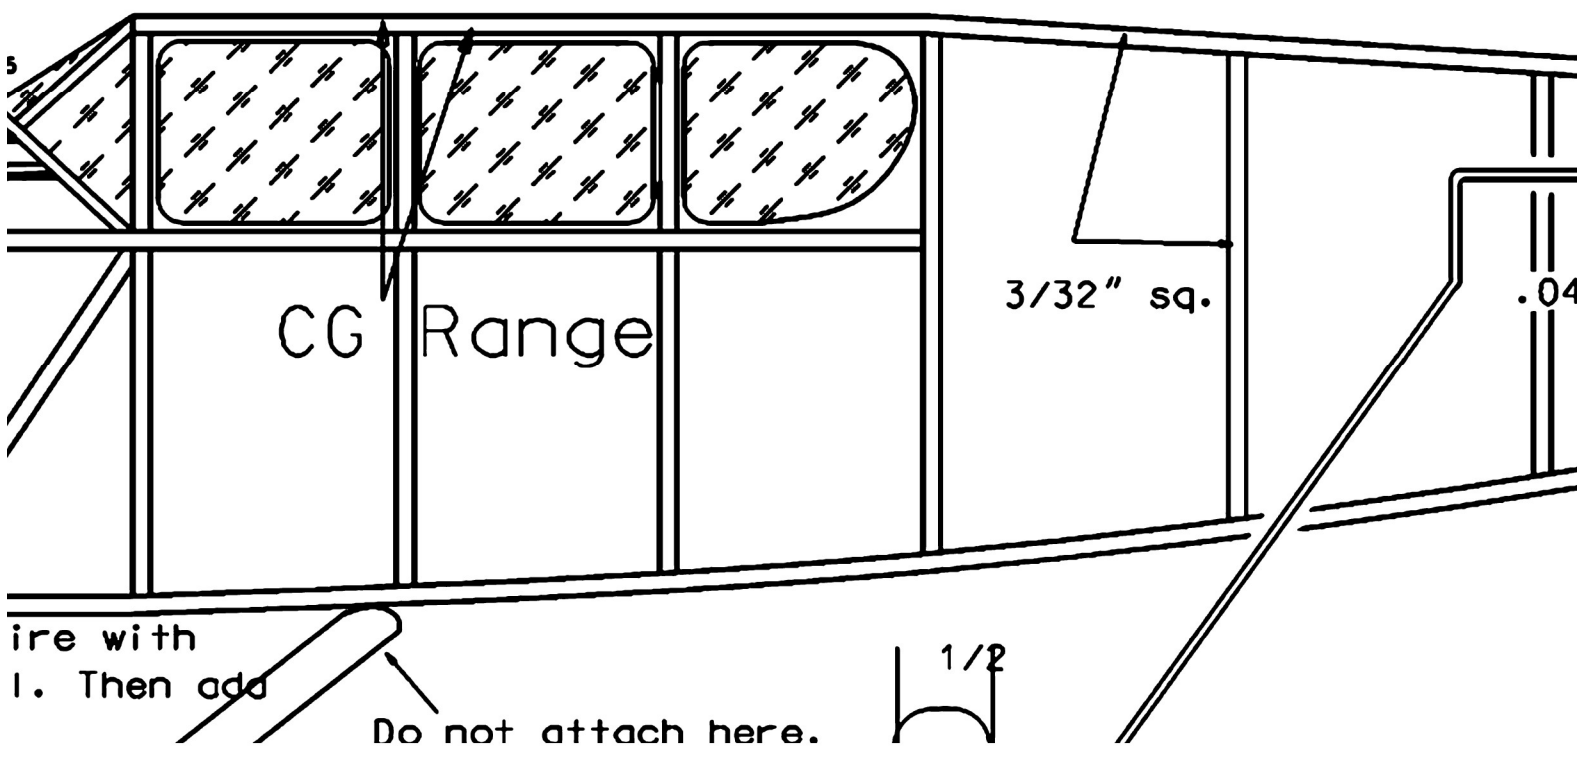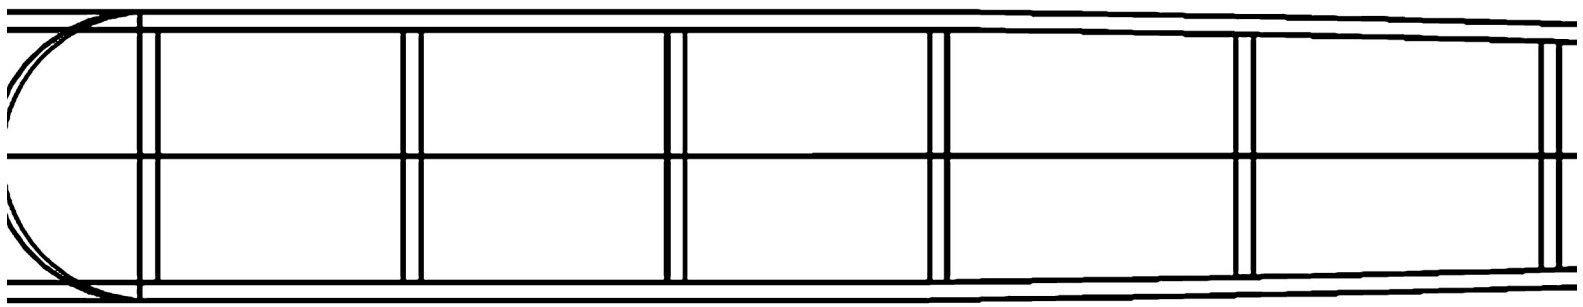


Outlines 1/16" balsa

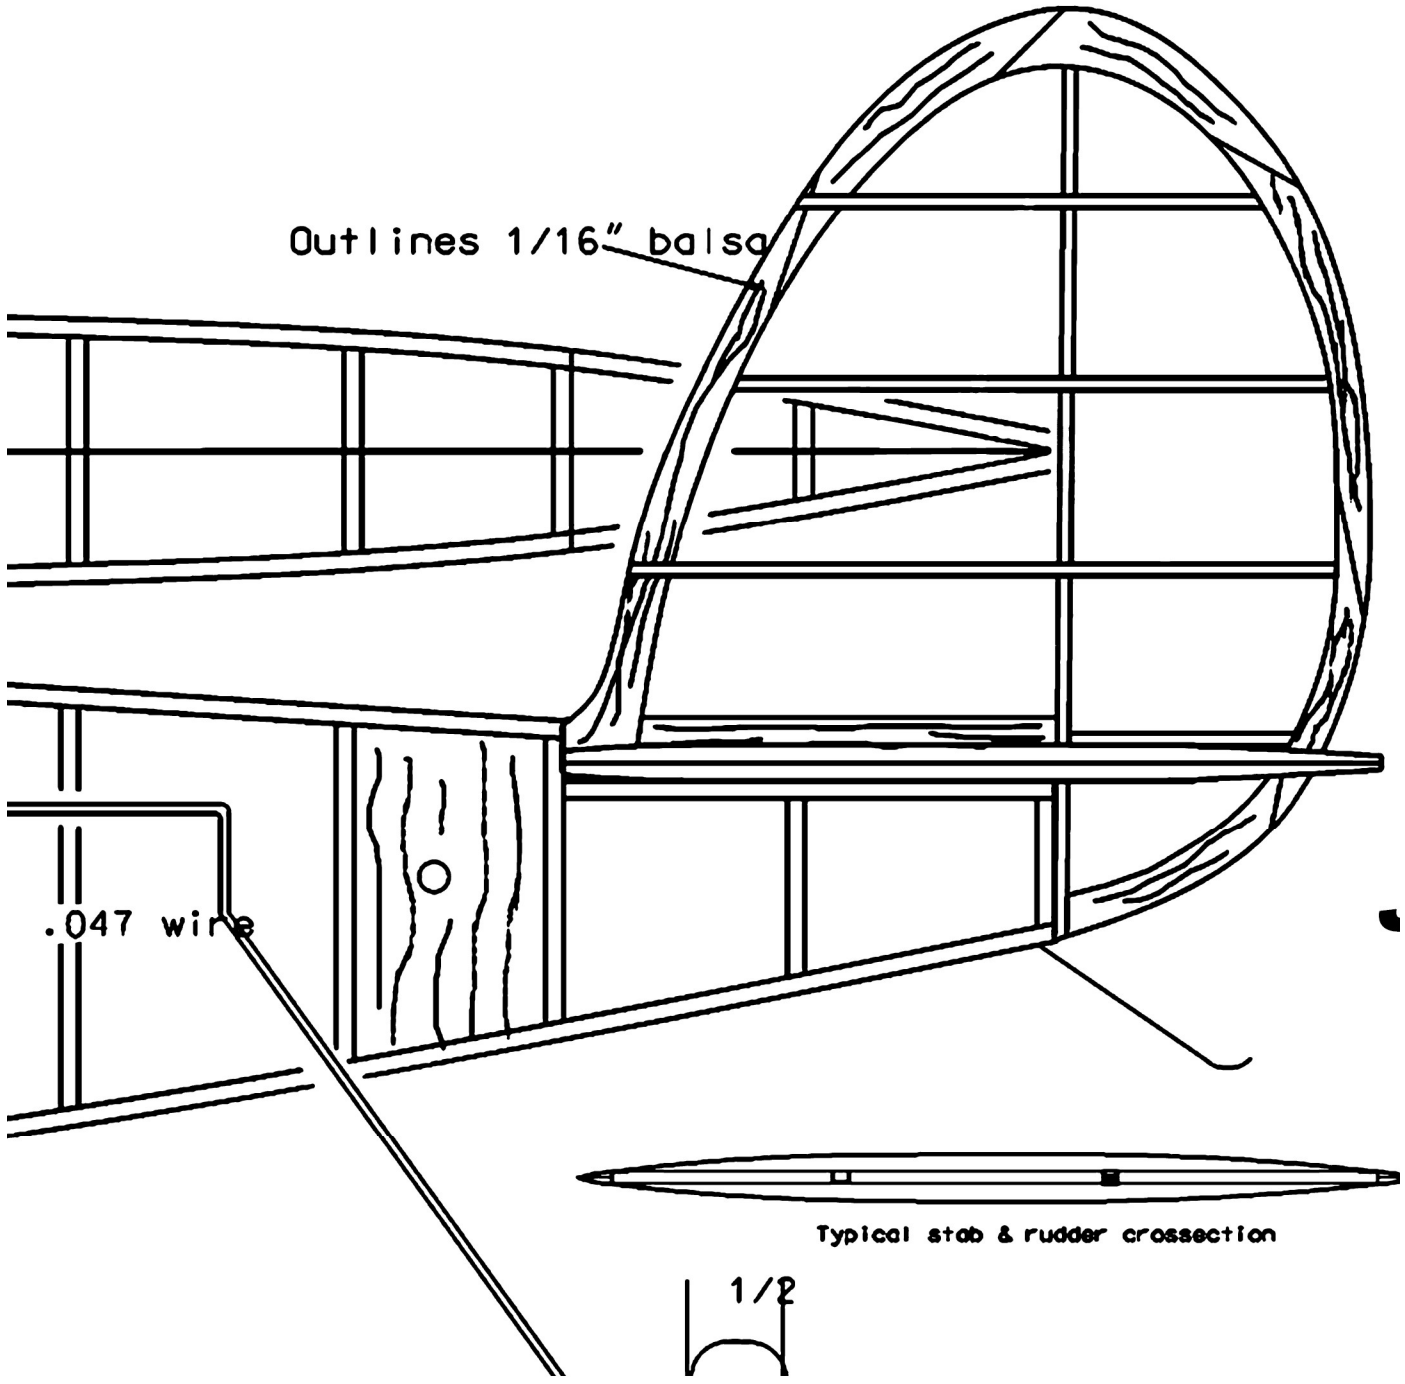

.047 wire

Typical stab & rudder crosssection

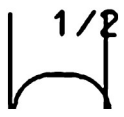

1/2